


NOTE:  
On a Positive output  
HPS the Iout Monitor  
is a negative voltage  
so the Vref into R6  
should be negative.

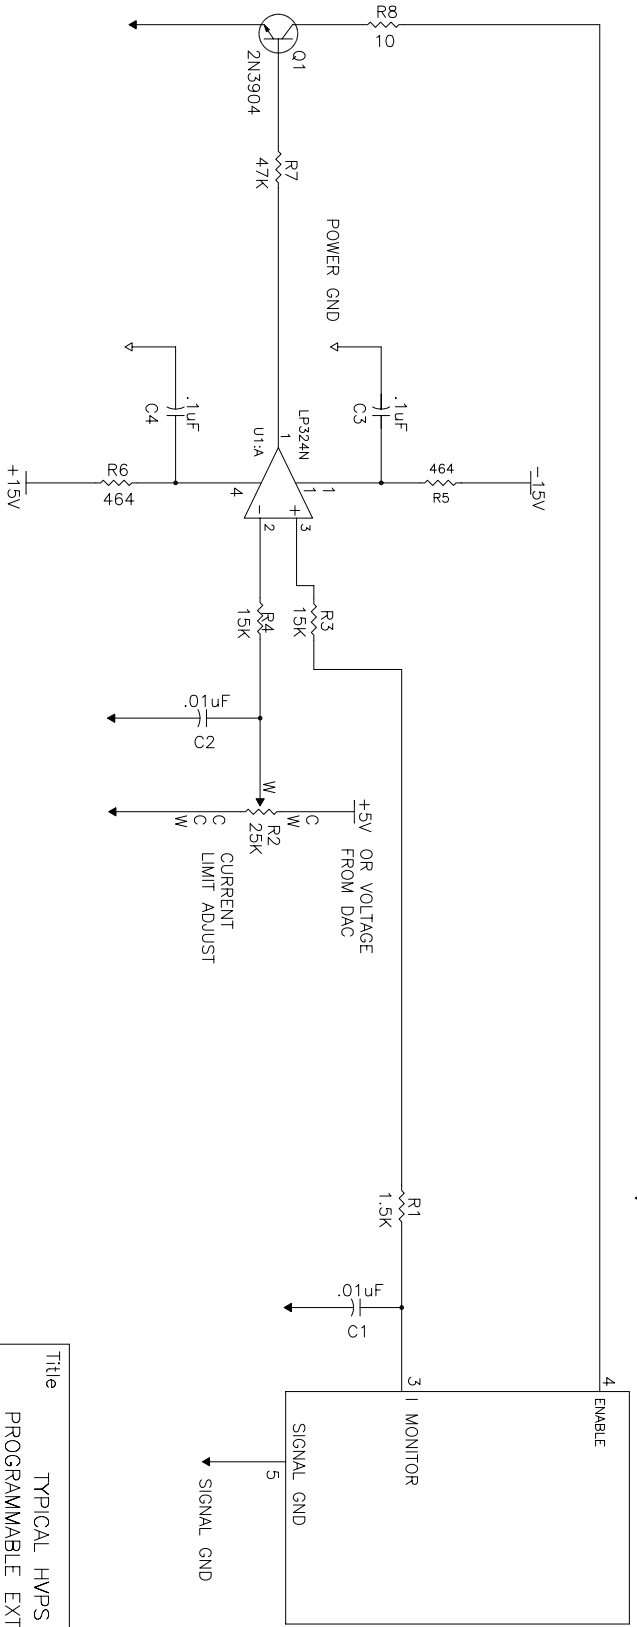

NOTES: REFER TO UV APPLICATION NOTE 13 FOR Iout MONITOR SCALE FACTORS  
UNUSED OP AMP INPUT SHOULD BE PULLED LOW

UltraVolt, Inc.  
1800 Ocean Ave. Frnt  
Ronkonkoma, NY 11779  
1-631-471-4444

Title		TYPICAL HVPS CONNECTIONS	
PROGRAMMABLE EXTERNAL CURRENT LIMIT		PROGRAMMABLE EXTERNAL CURRENT LIMIT	
Size	Number	UV-HVPS-CONN-6	Rev. E1
Date	Drawn By	J.T.	
6/21/00	Sheet	1	Of 1
Filename UV-HVPS-CONN-6_revE1.dwg			